


How to Cancel Route Guidance on the Eclipse II TomTom

NOTE: The TomTom must first be set to "Show All Menu Options". This selection is made in the Preferences. Otherwise you will not see the same screens and icons depicted in the following instructions. If you do not have a Main Menu 3 of 3 screen, you will need to read the guide that addresses "Show All Menu Options" setting first.


Step 1

Touch the center of the map screen

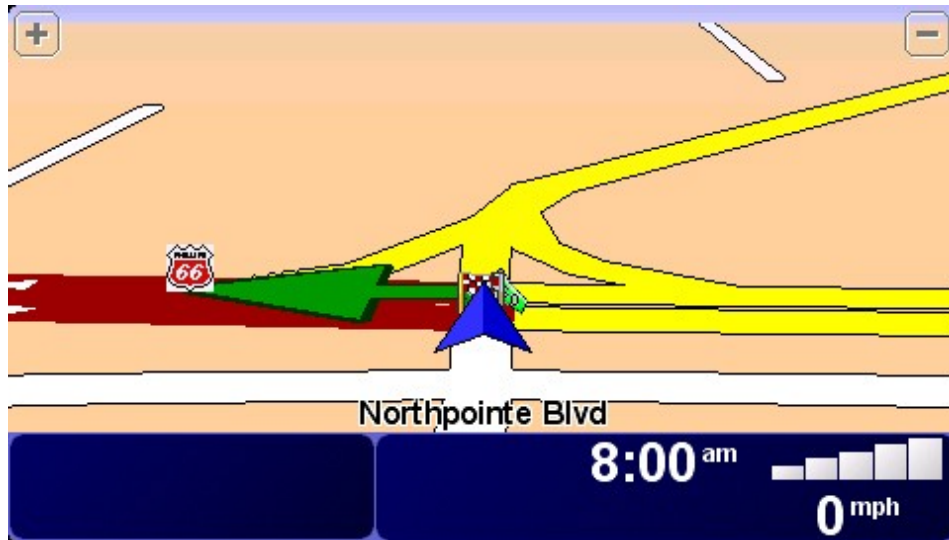

Step 2


Navigate to **Main Menu 3 of 3** by touching the blue arrow

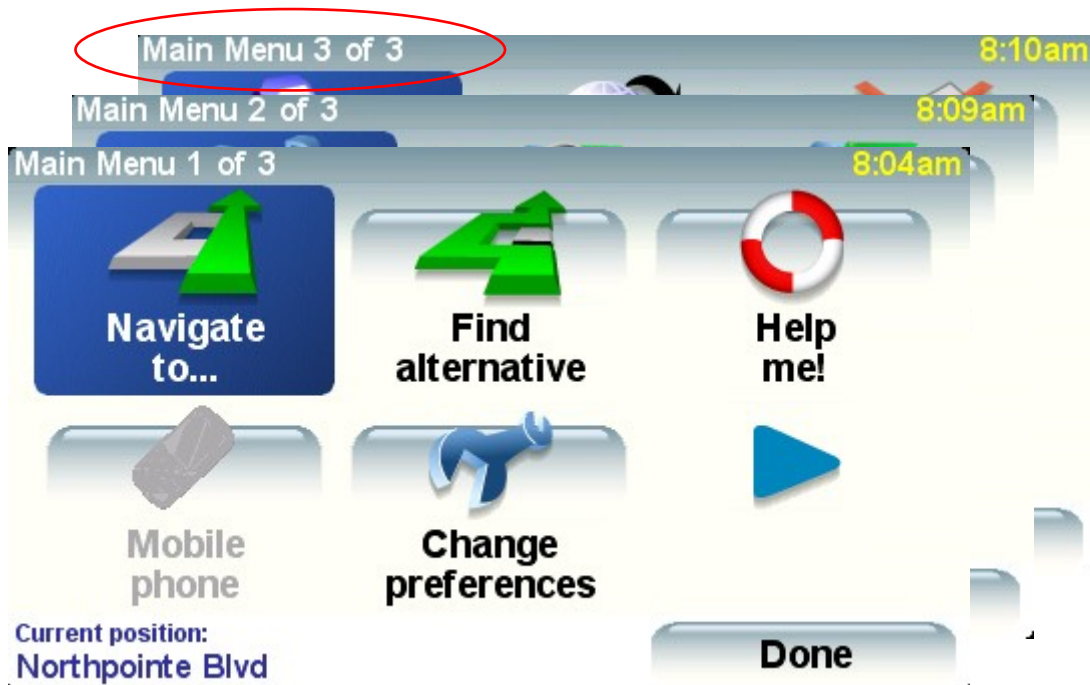

How to Cancel Route Guidance on the Eclipse II TomTom

Step 3

Touch Clear Route button

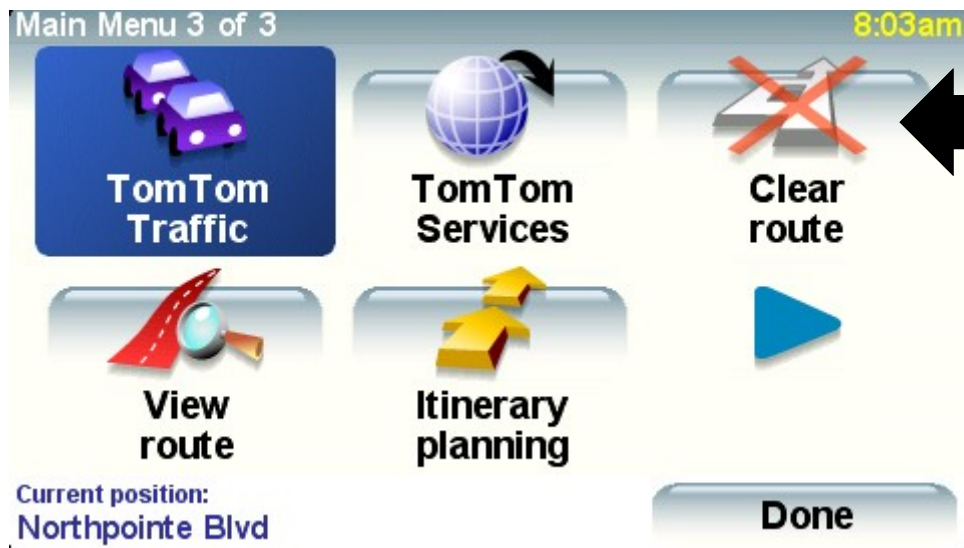

Step 4

Touch the YES button to confirm

